

Run Mode :

- ◇ Impuls at input : IN-'UP' (*count up*) or IN-'Down' (*count down*).
- ◇ Change actual counter UP/DOWN with Up-Down keys Hold for High Speed Scrolling.
- ◇ Press ENTER for counter reset "0000" or load the preset value (L Pr)


Press "MENU"

PRESS → Set preset value with UP / DOWN
 Save option with "ENTER"

PULSE → Puls lenght when equal OUT is triggered
 ◇ 0 = as long as equal
 ◇ 1 = approx. 100ms
 ◇ 2 = approx. 200ms
 Save option with "ENTER"

RST → Reset when preset value is reached?
 RST.y : Yes
 RST.n : No
 Save option with "ENTER"

DBC → Debounce inputs
 dbc.y : Yes → input frequency = 10Hz max.
 dbc.n : No → input frequency = 400Hz max.
 Save option with "ENTER"

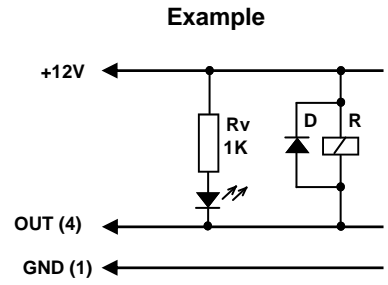

D : Protection diode (1N4148)
R : Relay coil (max. 100mA)

