




1/8 DIN  
48mm x 96mm


## ORDERING INFORMATION

| Part No. | Supply Voltage    |
|----------|-------------------|
| RC102C   | 85 to 270 V AC/DC |

## TERMINAL CONNECTIONS

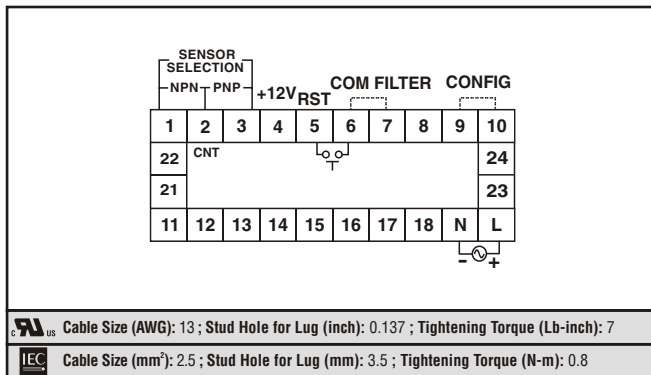

## DIMENSIONS

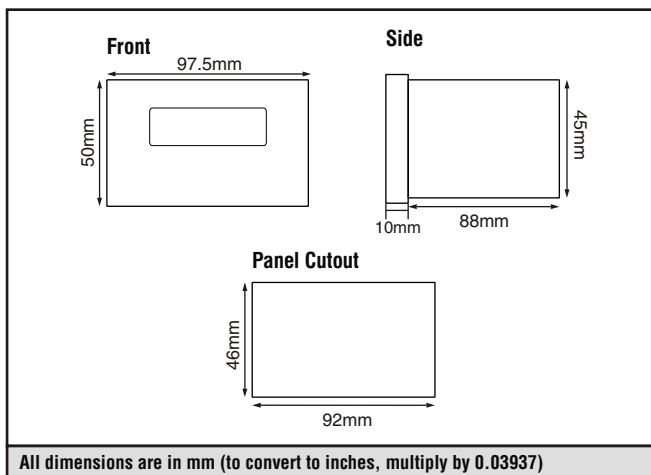

## FEATURES

- 6 Digit Counter; 4 Digit Rate Indicator
- Programmable Input Scaling
- Inbuilt Sensor Supply

## TECHNICAL SPECIFICATIONS

### INPUT SPECIFICATIONS

|              |  |
|--------------|--|
| Sensor Type  | PNP  |
| Input Type   | Voltage pulse (3 to 30V DC) from Proximity switches, Encoders, Solid state devices, Potential free contact |
| Input Speed  | a) 0 to 30Hz<br>b) 0 to 2.5kHz   |
| Accuracy     | Rate: 0.05% ± 2 counts   |
| Scale Factor | 0.00001 to 9.99999 x 10 <sup>n</sup><br>n= -3, -2, -1, 0, 1, 2   |
| Reset        | Front, Remote  |

### FUNCTIONAL SPECIFICATIONS

|                    |  |
|--------------------|--|
| Range              | Count: 9999.99, 99999.9, 999999<br>(user selectable)<br>Rate: 4.00 to 9999 RPM |
| Counting Direction | Unidirectional (Up)  |
| Memory Retention   | Current count value: 1 year<br>Parameter setting: 10 years                     |

### OUTPUT SPECIFICATIONS

|               |                       |
|---------------|-----------------------|
| Sensor Supply | Inbuilt, 12V DC, 30mA |
|---------------|-----------------------|

### GENERAL SPECIFICATIONS

|                           |  |
|---------------------------|--|
| Supply Voltage            | 85 to 270V AC/DC (50 / 60Hz)   |
| Power Consumption         | 5VA max  |
| Temperature               | Operating: 0 to 50°C (32 to 122°F)<br>Storage: -20 to 75°C (-4 to 167°F) |
| Humidity (non-condensing) | 95% RH   |
| Weight                    | 200 g (0.440 lbs)  |
| Protection Level          | IP65 for faceplate   |

# OPERATING INSTRUCTIONS RC102C



48 x 96

Please maintain these instructions and review them prior to using the unit:

### Warning:

1. This unit is panel mounted type with its output terminals getting connected to the host equipment. Such equipment shall also comply with basic EMI/EMC and safety requirements like BSEN 61326-1 and BSEN 61010 respectively.
2. To avoid electric shock, power supply of the unit should be kept off while wiring. Wiring should be done strictly as per the terminal layout, given in the manual.
3. Use lugged terminals to meet M3.5 screws.
4. The unit does not have a built-in fuse. External fuse with a rating of 275 VAC/1A is recommended.

### Caution:

1. This unit is not intended for outdoor use.
2. The power connection cable must have a cross-section of at least 1mm<sup>2</sup> and insulation capacity of at least 1.5kV.
3. The output connections must not be loaded beyond the specified values/range.
4. Avoid inflow of dust and contact of conductive material with the internal circuitry of the unit.
5. The unit must not operate in presence of heating sources, caustic vapors, oil, steam, vibration or impact etc.
6. Use clean soaked cloth cleaning.

## SPECIFICATIONS:

### DISPLAY

Type: 7 segment LED; Height: 0.5".  
Counter: 6 digits, Rate: 4 digits.

### RANGE

Counter: 9999.99, 99999.9 & 999999.  
Rate: Auto ranging (4.00 to 9999 RPM).

### ACCURACY

Rate: 0.05 % (± 2 count).

### SCALE FACTOR

Programmable from 0.00001 to 9.99999x10<sup>n</sup>  
n = -3, -2, -1, 0, 1, 2.

### INPUTS

3-30 VDC from Proximity switches, Encoders, Potential free contacts, Limit switches etc.

### SENSOR SUPPLY

In built 12 VDC (±10%), 30 mA

### INPUT SPEED

- 1) 30 Hz
- 2) 2.5 kHz.

### CONFIGURATION LOCK

via rear terminals.

### RESET

- 1) On front panel.
- 2) Remote reset (via rear terminals).

### MEMORY RETENTION

10 years.

### SUPPLY VOLTAGE

90 to 270 VAC/DC @ 50/60 Hz.

### OPERATING TEMP.

Operating: 0 - 50°C  
Storage: 0 to 50°C

### HUMIDITY

95% RH.


### HOUSING

Flame retardant plastic.

### WEIGHT


250 gms.

### PANEL DIMENSIONS(dimensions in mm)

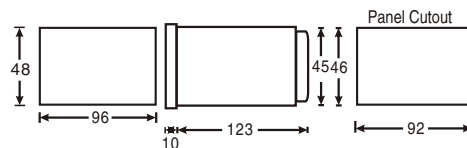


| MODEL  | DIM | A  | B    | C  | D  | E  | F  | G  |
|--------|-----|----|------|----|----|----|----|----|
| RC102C |     | 50 | 97.5 | 10 | 88 | 45 | 46 | 92 |

### TERMINAL CONNECTION

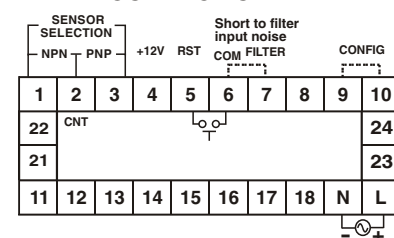


| Description                  | Terminal |
|------------------------------|----------|
| Short to select NPN sensor   | 1 - 2    |
| Short to select PNP sensor   | 2 - 3    |
| Count input                  | 2        |
| +12V supply                  | 4        |
| COM (GND)                    | 6        |
| Reset input                  | 5 - 6    |
| Short to Filter input noise  | 6 - 7    |
| Short to enter configuration | 9 - 10   |
| Live - Neutral               | L - N    |


### INPUT CONNECTIONS:

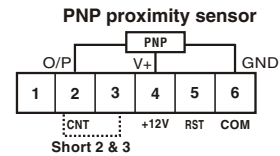

NOTE: For PNP sensor input, short terminals 2 & 3.

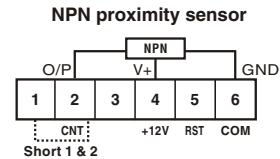

NOTE: For NPN sensor input, short terminals 1 & 2.

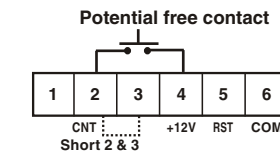

NOTE: Short terminals 2 & 3.

### Sensor color codes:-

Red = +12V, Green = CNT, Black = GND;  
Brown = +12V, Black = CNT, Blue = GND.

### NOTE:

In some applications, the proximity sensors may pick up high frequency noise from nearby switching circuits like AC / DC drive. Due to this the counter may show erroneous reading. Short terminals 6-7 for RC102C as shown in figure above, to filter out high frequency spurious pulses by limiting the input frequency to about 200Hz (1200 RPM).


### RATE OR TOTAL DISPLAY MODE:

The RC102C toggles between RATE display and TOTAL display at the momentary press of R/T (R/T) key. In rate mode RATE LED glows & in totaliser mode TOTAL LED glows.



RATE

press (R/T) key momentary



TOTAL


### RESETTING THE RC102C

**A. By front key:** Press R/T (R/T) key continuously for 3 sec. The totaliser resets to zero and starts counting again, and the display shows the rate or total as per selection.

### B. Remote reset:

The RC102C can be reset from a remote push button as shown in the figure below:

### Reset by potential free switch



### INITIALISATION:

Switch off the power. Short terminal no. 9 & 10. Press key (R/T) at the time of turning the power on. The key must continue to remain pressed for another 3 sec. When this sequence is correctly performed, the unit initialises and all parameters are set to factory settings.

Scale factor changes to 1 (mantissa = 1.0000 & exponent = 10<sup>0</sup>=1), Resolution = 1, Maximum input frequency = 2500 Hz. Totaliser resets to 0.

After initialisation unit will go into configuration setting mode. To quit configuration setting mode:

- 1) Turn power off
- 2) Remove link between terminal nos 9 & 10
- 3) Turn power on.

## CONFIGURATION SCHEME

To enter configuration short terminals 9 & 10 and turn the power on.  
Configure the unit as per the instructions below.

### 1. To select scale factor mantissa

| KEY PRESS | DISPLAY | DESCRIPTION |
|-----------|---------|-------------|
|-----------|---------|-------------|

|                       |        |  |
|-----------------------|--------|--|
| Scale factor mantissa | 100000 | Set between 0.00001 to 9.99999 as described below: |
|-----------------------|--------|--|

The blinking digit increments by 1 for every press of the  $\Delta$  key & rolls over from 9 to 0. The blinking digit shifts to next digit (right) for every press of  $\blacktriangleright$  key. Using these keys user can set the required value.

### 2. Press R/T $\blacksquare$ key to select scale factor exponent

|                       |     |                   |
|-----------------------|-----|-------------------|
| Scale factor exponent | 0   | $10^0 = 1$        |
| Press $\Delta$        | 1   | $10^1 = 10$       |
| Press $\Delta$        | 2   | $10^2 = 100$      |
| Press $\Delta$        | - 3 | $10^{-3} = 0.001$ |
| Press $\Delta$        | - 2 | $10^{-2} = 0.01$  |
| Press $\Delta$        | - 1 | $10^{-1} = 0.1$   |

### 3. Press R/T $\blacksquare$ key to select totaliser resolution

|                      |      |                    |
|----------------------|------|--------------------|
| Totaliser resolution | 1    | Least count = 1    |
| Press $\Delta$       | 0.1  | Least count = 0.1  |
| Press $\Delta$       | 0.01 | Least count = 0.01 |

### 4. Press R/T $\blacksquare$ key to select max. input frequency

|                      |        |                              |
|----------------------|--------|------------------------------|
| Max. input frequency | 2 2500 | Fast speed (maximum 2500 hz) |
| Press $\Delta$       | 2 30   | Slow speed (maximum 30 hz)   |

### 5. Press R/T $\blacksquare$ key to complete setting, display will go to step 1 (scale factor mantissa setting).

#### To quit configuration:

- 1) Turn power off.
- 2) Remove link between terminal no 9 & 10.
- 3) Turn power on.

## TO READ SCALE FACTOR , RESOLUTION & SPEED

| KEY PRESS (MOMENTARY)     | DISPLAY | NAME / DESCRIPTION      |
|---------------------------|---------|-------------------------|
| $\blacktriangleright$ PRG | 100000  | Scale Factor (Mantissa) |
| $\blacktriangleright$ PRG | 0       | Scale Factor (Exponent) |
| $\blacktriangleright$ PRG | 1 1     | Totaliser Least Count   |
| $\blacktriangleright$ PRG | 2 2500  | Maximum Input Speed     |

**NOTE:** Maximum display time is 3 sec. If the key is pressed again within 3 sec of previous key press, display shows next parameter, otherwise it shows rate or total as per selection.


### TYPICAL APPLICATION:

**Objective:** To display: a. The total length of cord (in meters) that has passed over the measuring wheel

b. The delivery rate of cord (meters / minute).

#### Data available:

The proximity switch generates 1 pulse / revolution of the measuring wheel. The diameter of the wheel is 10cm.

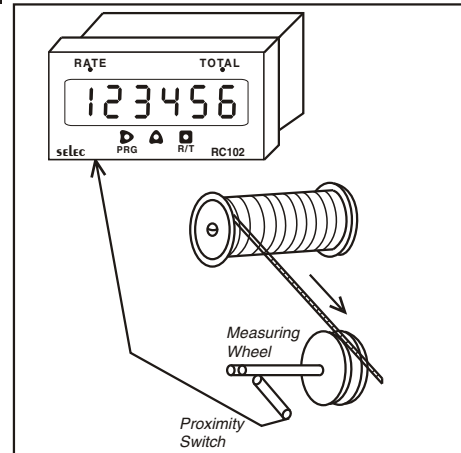

#### Calculations

Circumference of the wheel =  $3.14285 \times 0.1 = 0.314285\text{m}$ .

Therefore the length of rope delivered per revolution is  $0.314285\text{m}$ .

Since the proximity switch gives one pulse per revolution, the display should increment by  $0.314285$  for every pulse. Therefore, scale factor =  $0.314285$ .

Set scale factor mantissa =  $3.14285$  & exponent =  $10^{-1}$

The RC102C will show rate in meters / minute & total in meters.

**Example 2:** If 60 PPR encoder is fitted instead of proximity.

Length of rope delivered per revolution is  $0.314285\text{m}$ .

Number of pulses per revolution = 60.

Length of rope delivered / pulse =  $0.314285 / 60 = 0.005238\text{m}$ .

The display should increment by  $0.005238$  for every pulse. Therefore, scale factor =  $5.23800 \times 10^{-3}$

Set scale factor mantissa =  $5.23800$  & exponent =  $10^{-3}$  for the required display.

## WARRANTY / LIMITATIONS OF LIABILITY

Selec Controls USA., Inc. warrants the products to be free from defects in the materials and workmanship for a period of one year (or other period specified, if any) from the date of sale by Selec.

The warranty does not apply to defects resulting from any action of the buyer, including but not limited to improper handling, operating the product outside the specification limits, or unauthorized disassembling / altering of the product. The warranty shall be VOID if the product shows evidence of having been tampered or being damaged due to usage in corrosive environment ; or current, heat, moisture or vibration ; improper specification ; wrong usage in an application ; misuse or other operating conditions outside of Selec's control.

Selec shall not be responsible for special, indirect or consequential damages, loss of profits or commercial loss in any way connected with the products, whether such claim is based on contract, warranty, negligence or strict liability.

In no event shall the responsibility of Selec for any act exceed the individual price of the product on which liability is asserted.

In no event shall Selec be responsible for warranty or other claims regarding the products unless Selec's analysis confirms that the products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse, or inappropriate modification or repair.

(Specifications subject to change as development is a continuous process).

### Selec Controls USA., Inc.

203 Main Street, #205

Flemington, NJ 08822, USA

Website: [www.selecusa.com](http://www.selecusa.com)

E- mail: [sales@selecusa.com](mailto:sales@selecusa.com)